




Outperform every day.™

Instruction Sheet

Timer for Two-Bowl CBD Granita Machines with Serial Numbers After H068-345145-022

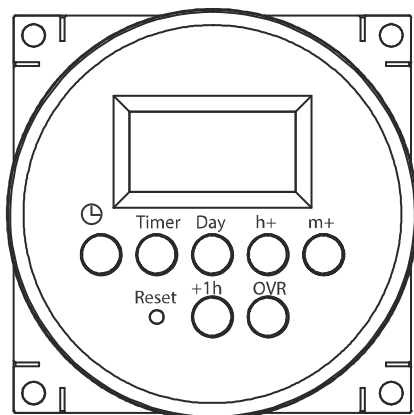


Set the Current Time and Day

1. Press and release the **reset** button. The display will flash.
2. Press and hold **⌚** and **+h** simultaneously. The display will show 12:00AM. Then, if your time zone is currently:
 - in Daylight Savings Time: Press the **+1h** button. Got to step 3.
 - not in Daylight Savings Time: Go to step 3.
3. Press and hold **⌚**. Press **h+** until the display shows the hour.
4. Press and hold **⌚**. Press **m+** until the display shows the minute.
5. Press and hold **⌚**. Press **Day** until the display shows the day.

Program Auto Defrost Cycles

Up to 7 cycles can be set. Each must have an On (start) and an Off (stop).

1. Press the **Timer** button. The display will show:

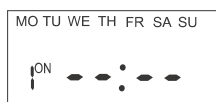

Program a Defrost On

1. Select the day(s). Press **Day** to select the day(s) of the week.

Day(s)	Select
A specific day	The desired day
Every weekday	MO, TU, WE, TH, FR
Every weekend	SA, SU
Monday through Saturday	MO through SA
Monday, Wednesday, Friday	MO, WE, FR

2. Select the hour. Press **h+** to scroll to the desired hour.
3. Select the minute. Press **m+** to scroll to the desired minute. The display will show:



4. Press **Timer** to save the settings and go to set the Defrost Off.

Program a Defrost Off

1. Repeat steps 1-3 to set the day(s), hour and minute. The display will show:



2. To program another defrost cycle, press **Timer**. Follow the steps for programming a defrost start time.
3. To end programming, press **⌚** to return to the main screen.

Change Defrost Cycle Settings

1. Press **Timer** to scroll to the On or Off entry you want to change.
2. Then,

To Change the Start or End	Repeatedly Press and Release
Day(s) of the week	Day
Hour	h+
Minute	m+

3. When finished, press **⌚** to confirm the settings.

Override the Settings

To Manually Defrost the Machine

Press **OVR**. The machine will remain in defrost mode until either the defrost mode is manually stopped or the start of the next programmed cycle. The display will show:




To Manually Stop a Defrost

Press **OVR**. The display will show:



Delete Defrost Settings

1. Press **Timer** to scroll to the On or Off entry.
2. Press **OVR** to delete the entry. The display will show:

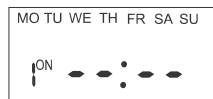

Note: Each cycle must have an On and an Off. Be sure to delete both the On and Off entries.

3. Press **⌚** to return to the time of day screen.

Reset the Timer

Resetting the timer will delete all of the programmed defrost cycle settings.

1. Press **Reset**.

Register your product at Vollrath.com/registration and become eligible to win a free 10" Vollrath Tribute® fry pan.